 
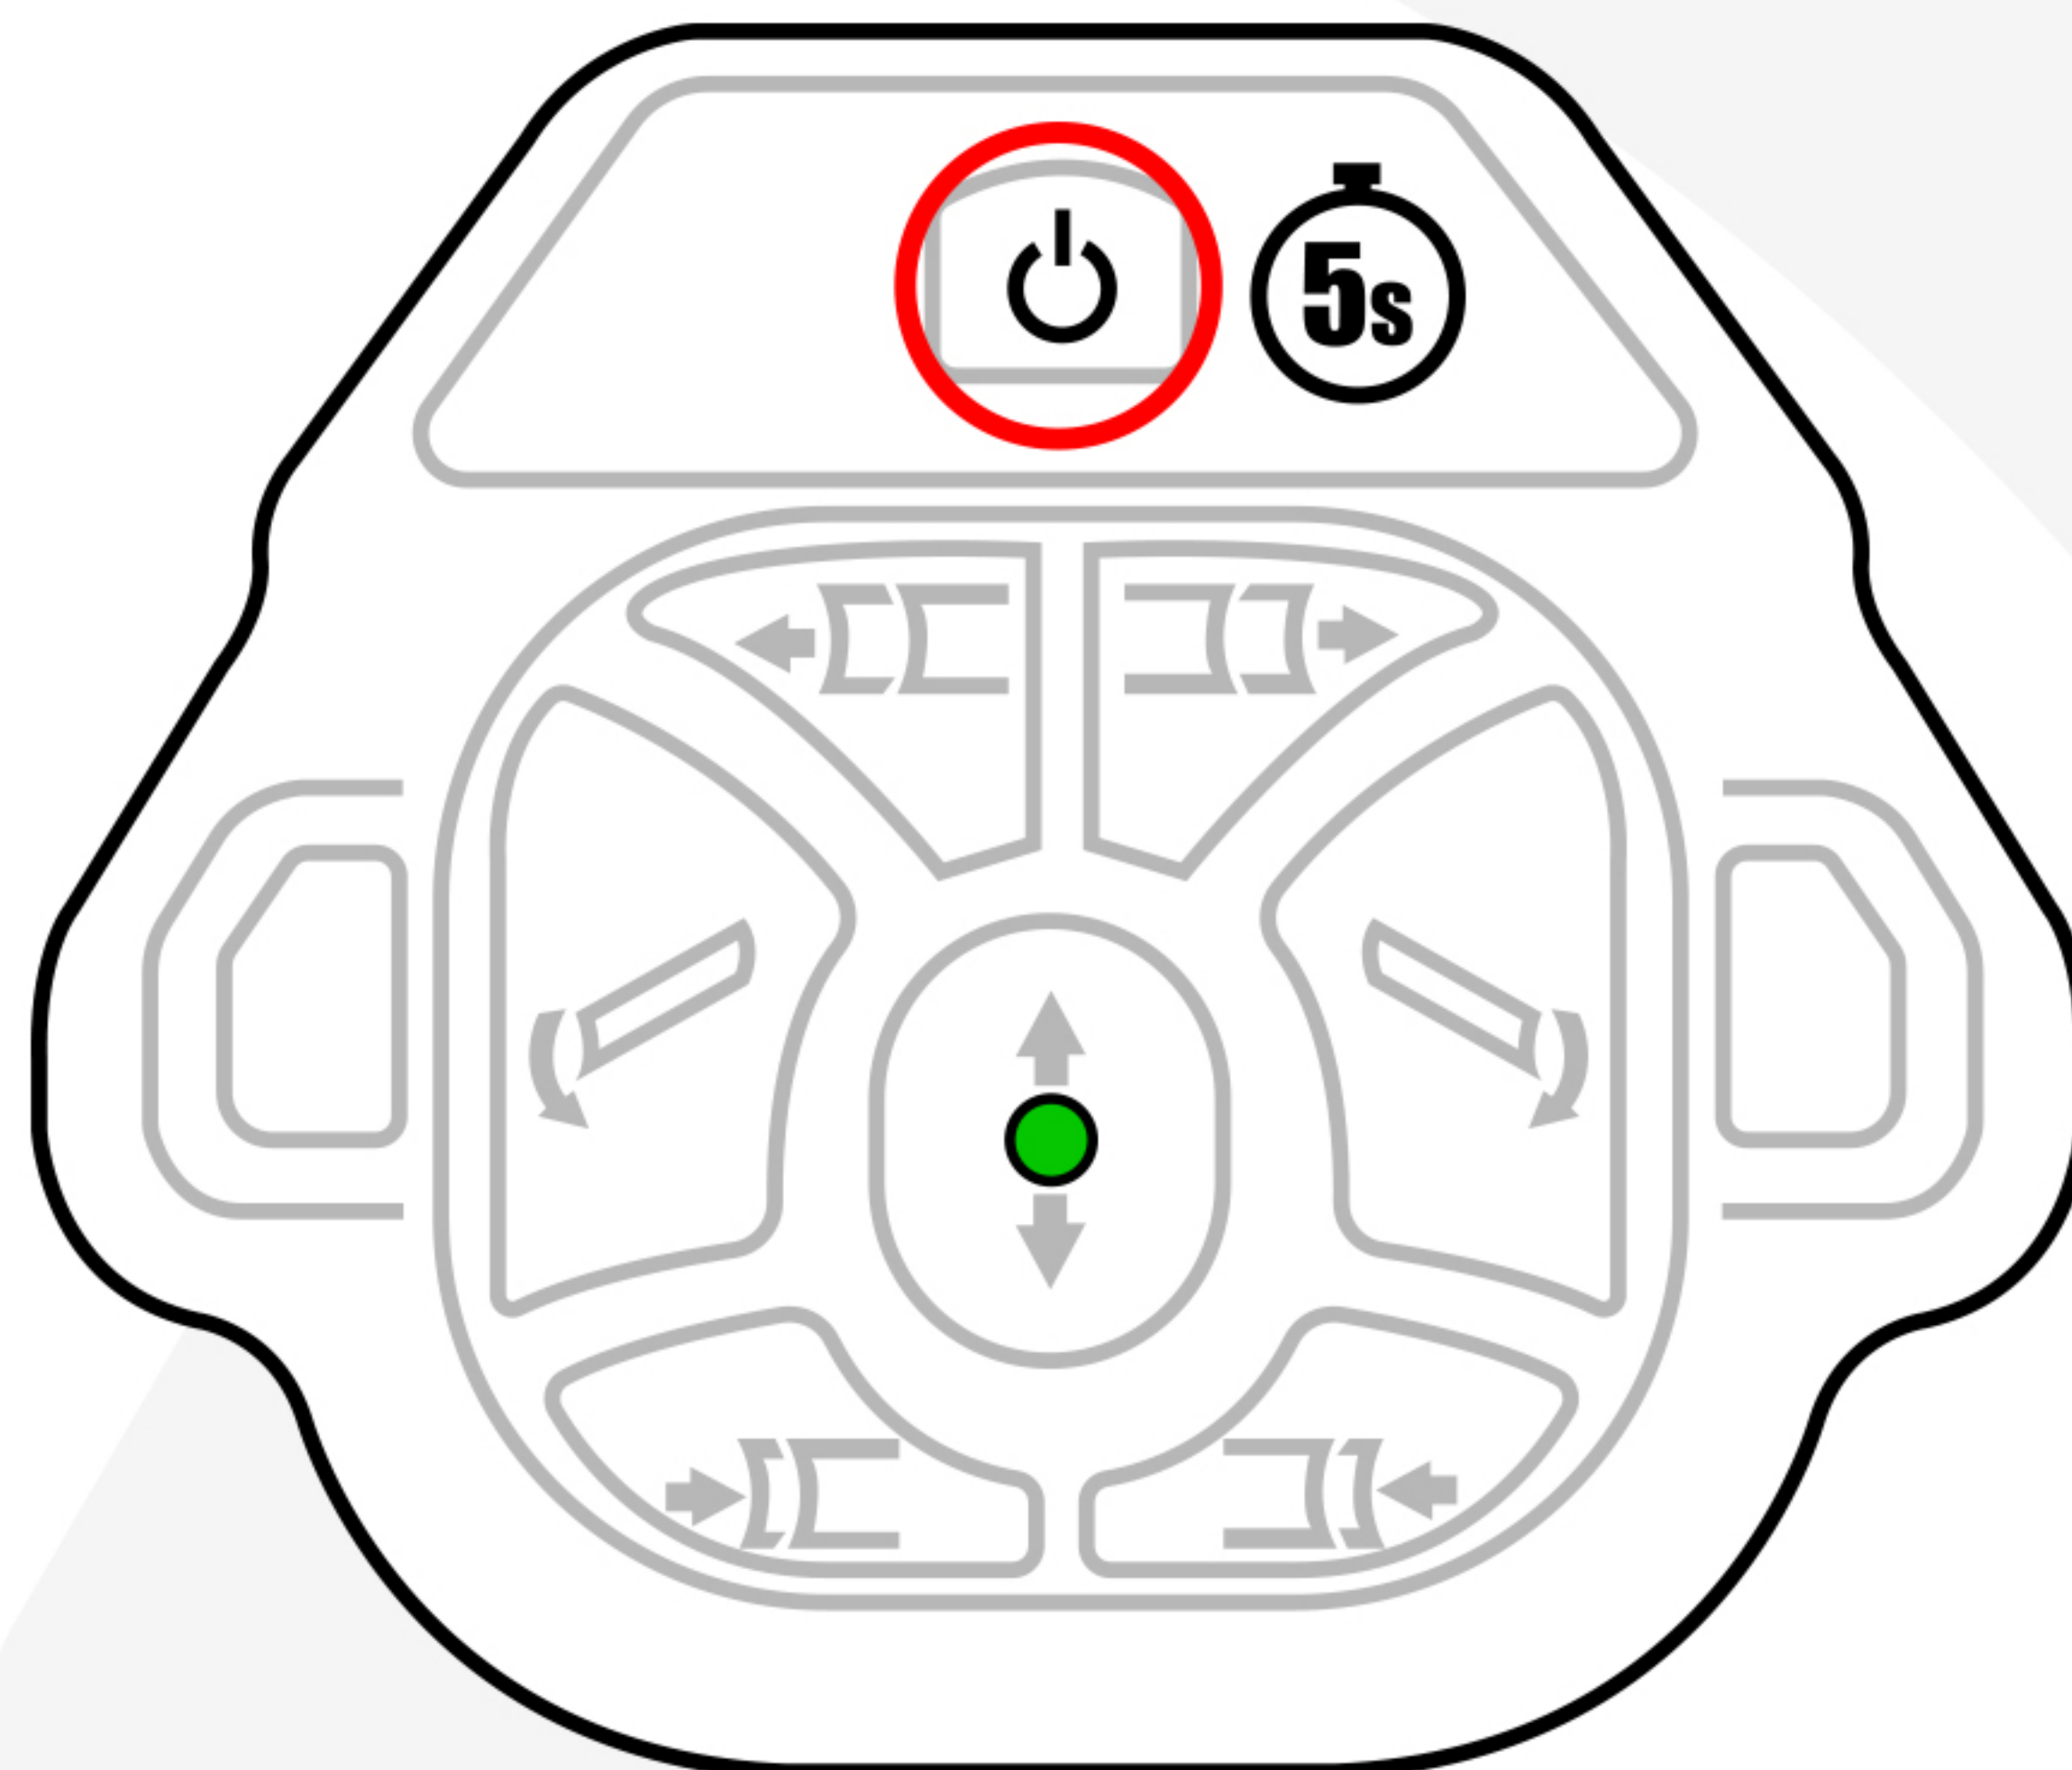 



**NOTE: The settings will be saved until this procedure is repeated.**

## Entering Configuration Mode:

- ⊗ With the controller turned **OFF**, press and hold the **POWER** button for 5 seconds.

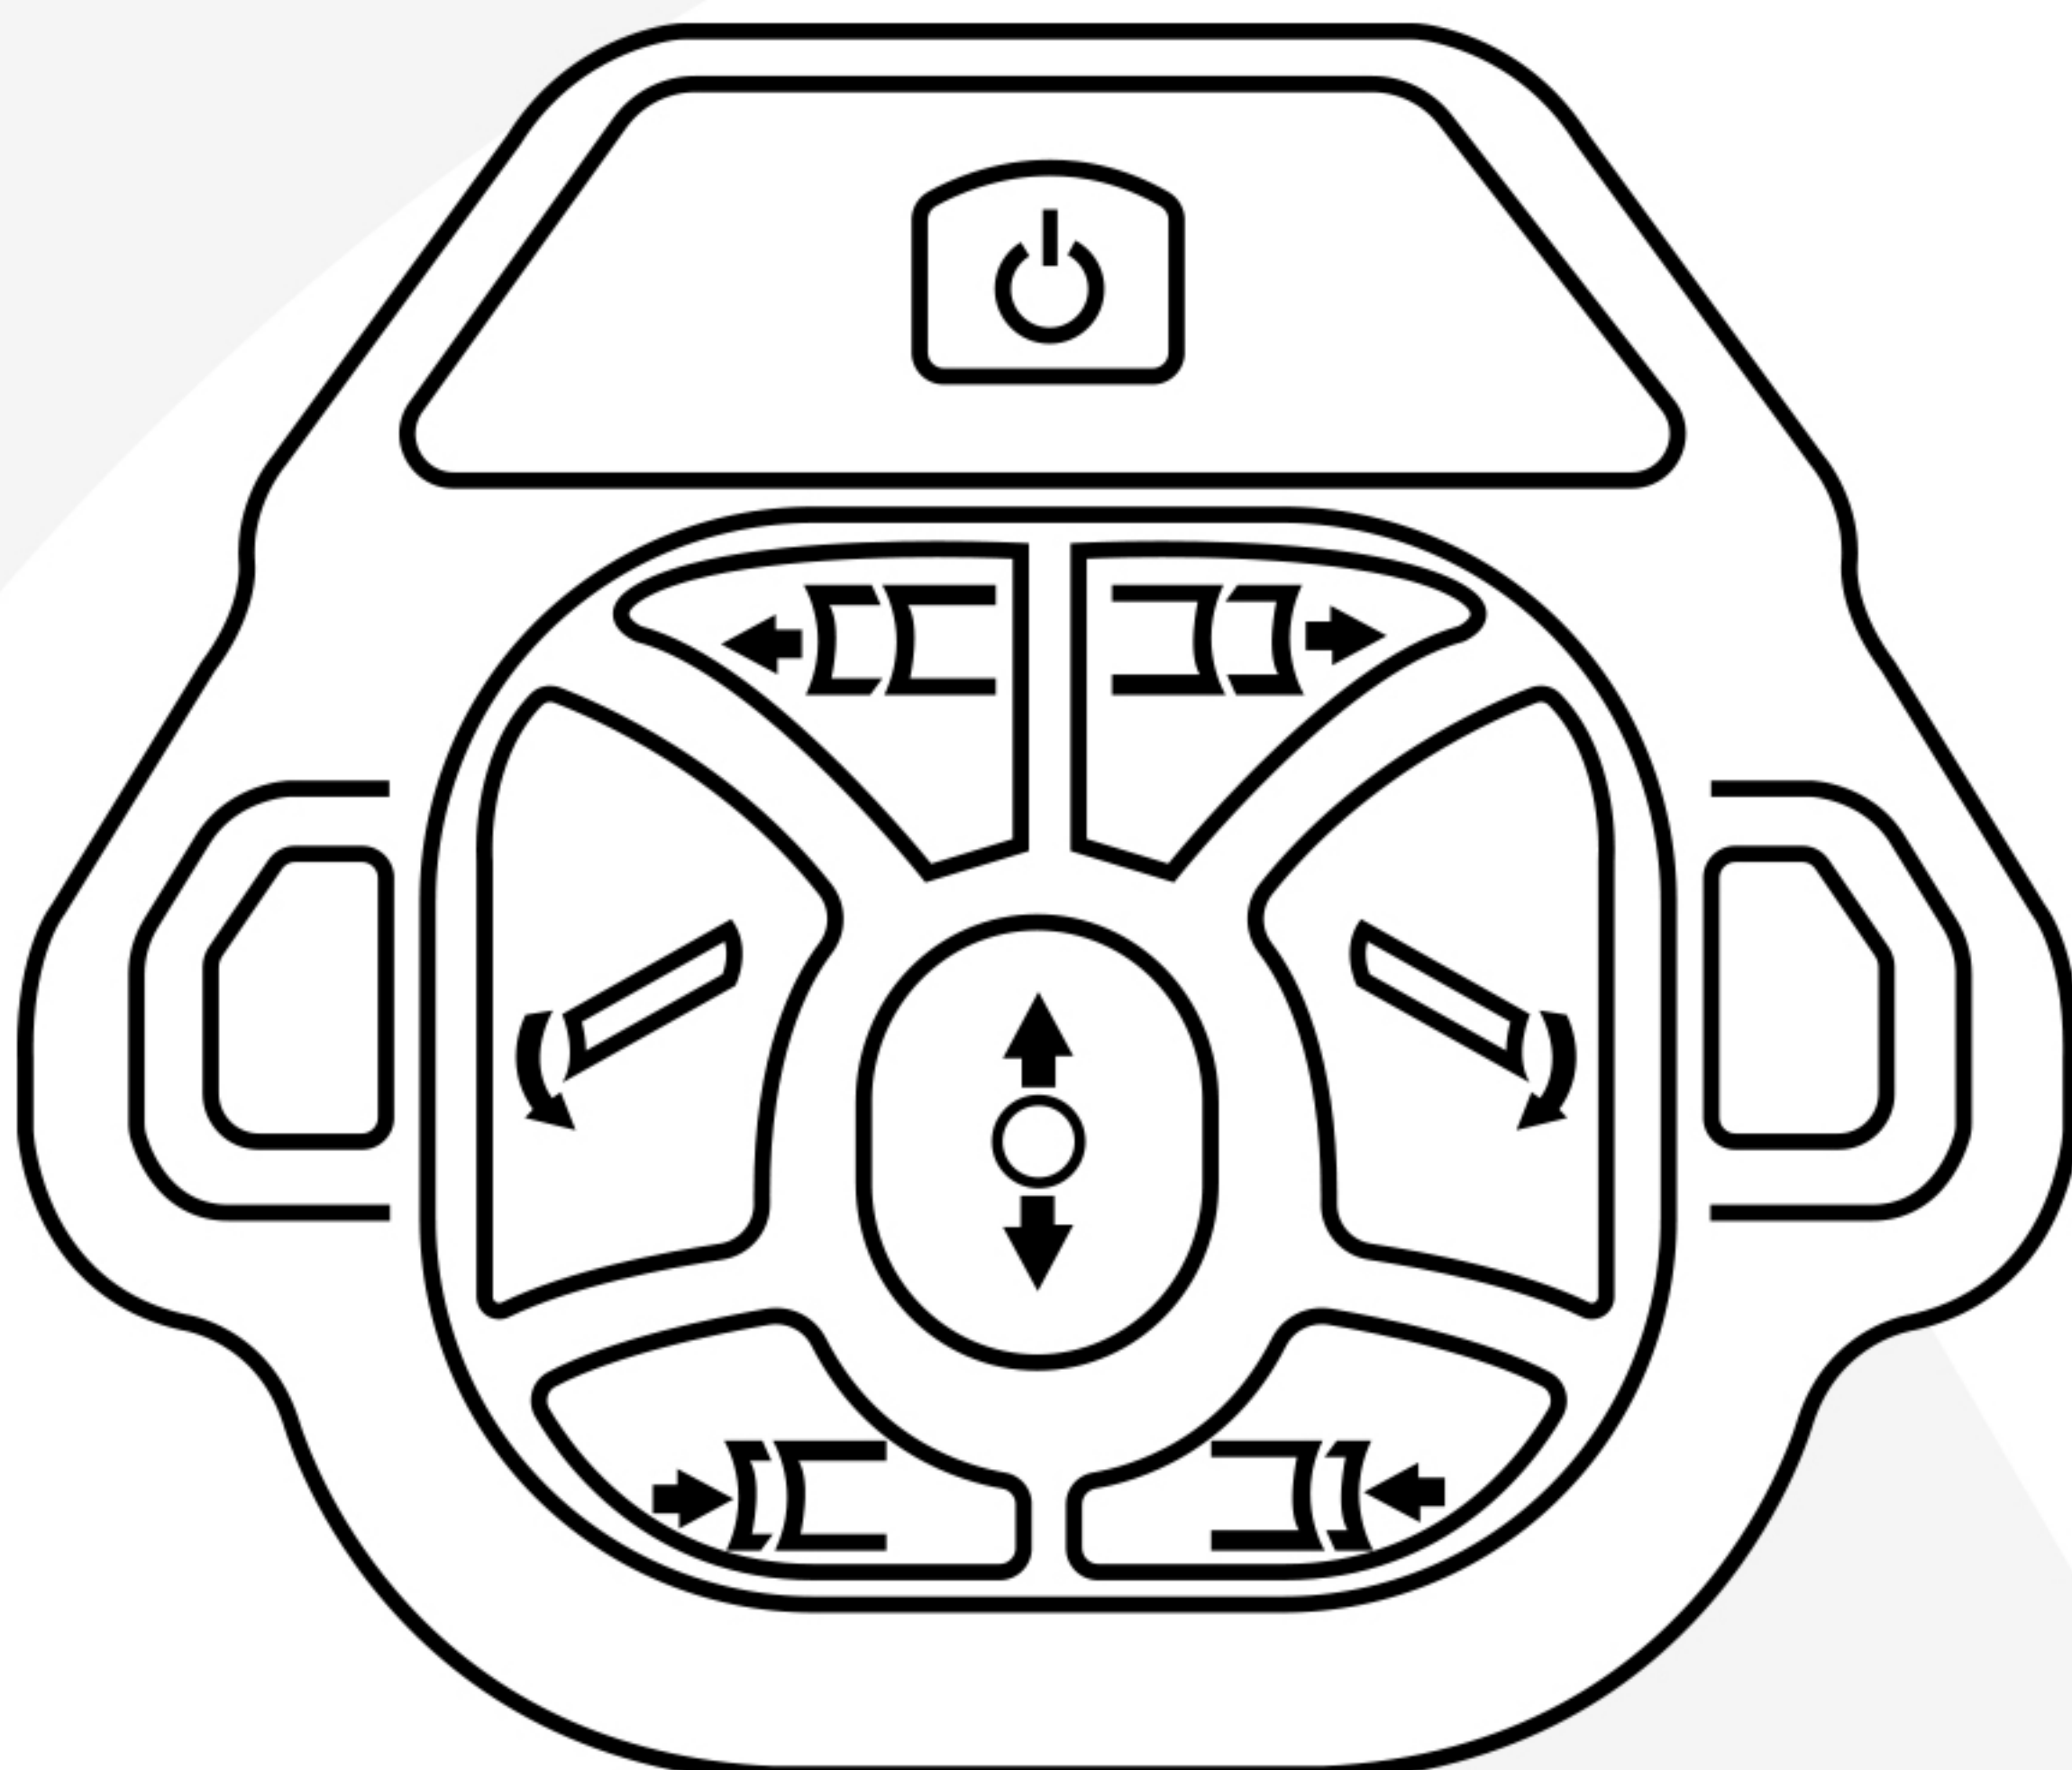

 - ⊗ The controller will enter programming mode and the center button will flash Green or Red while in this mode.

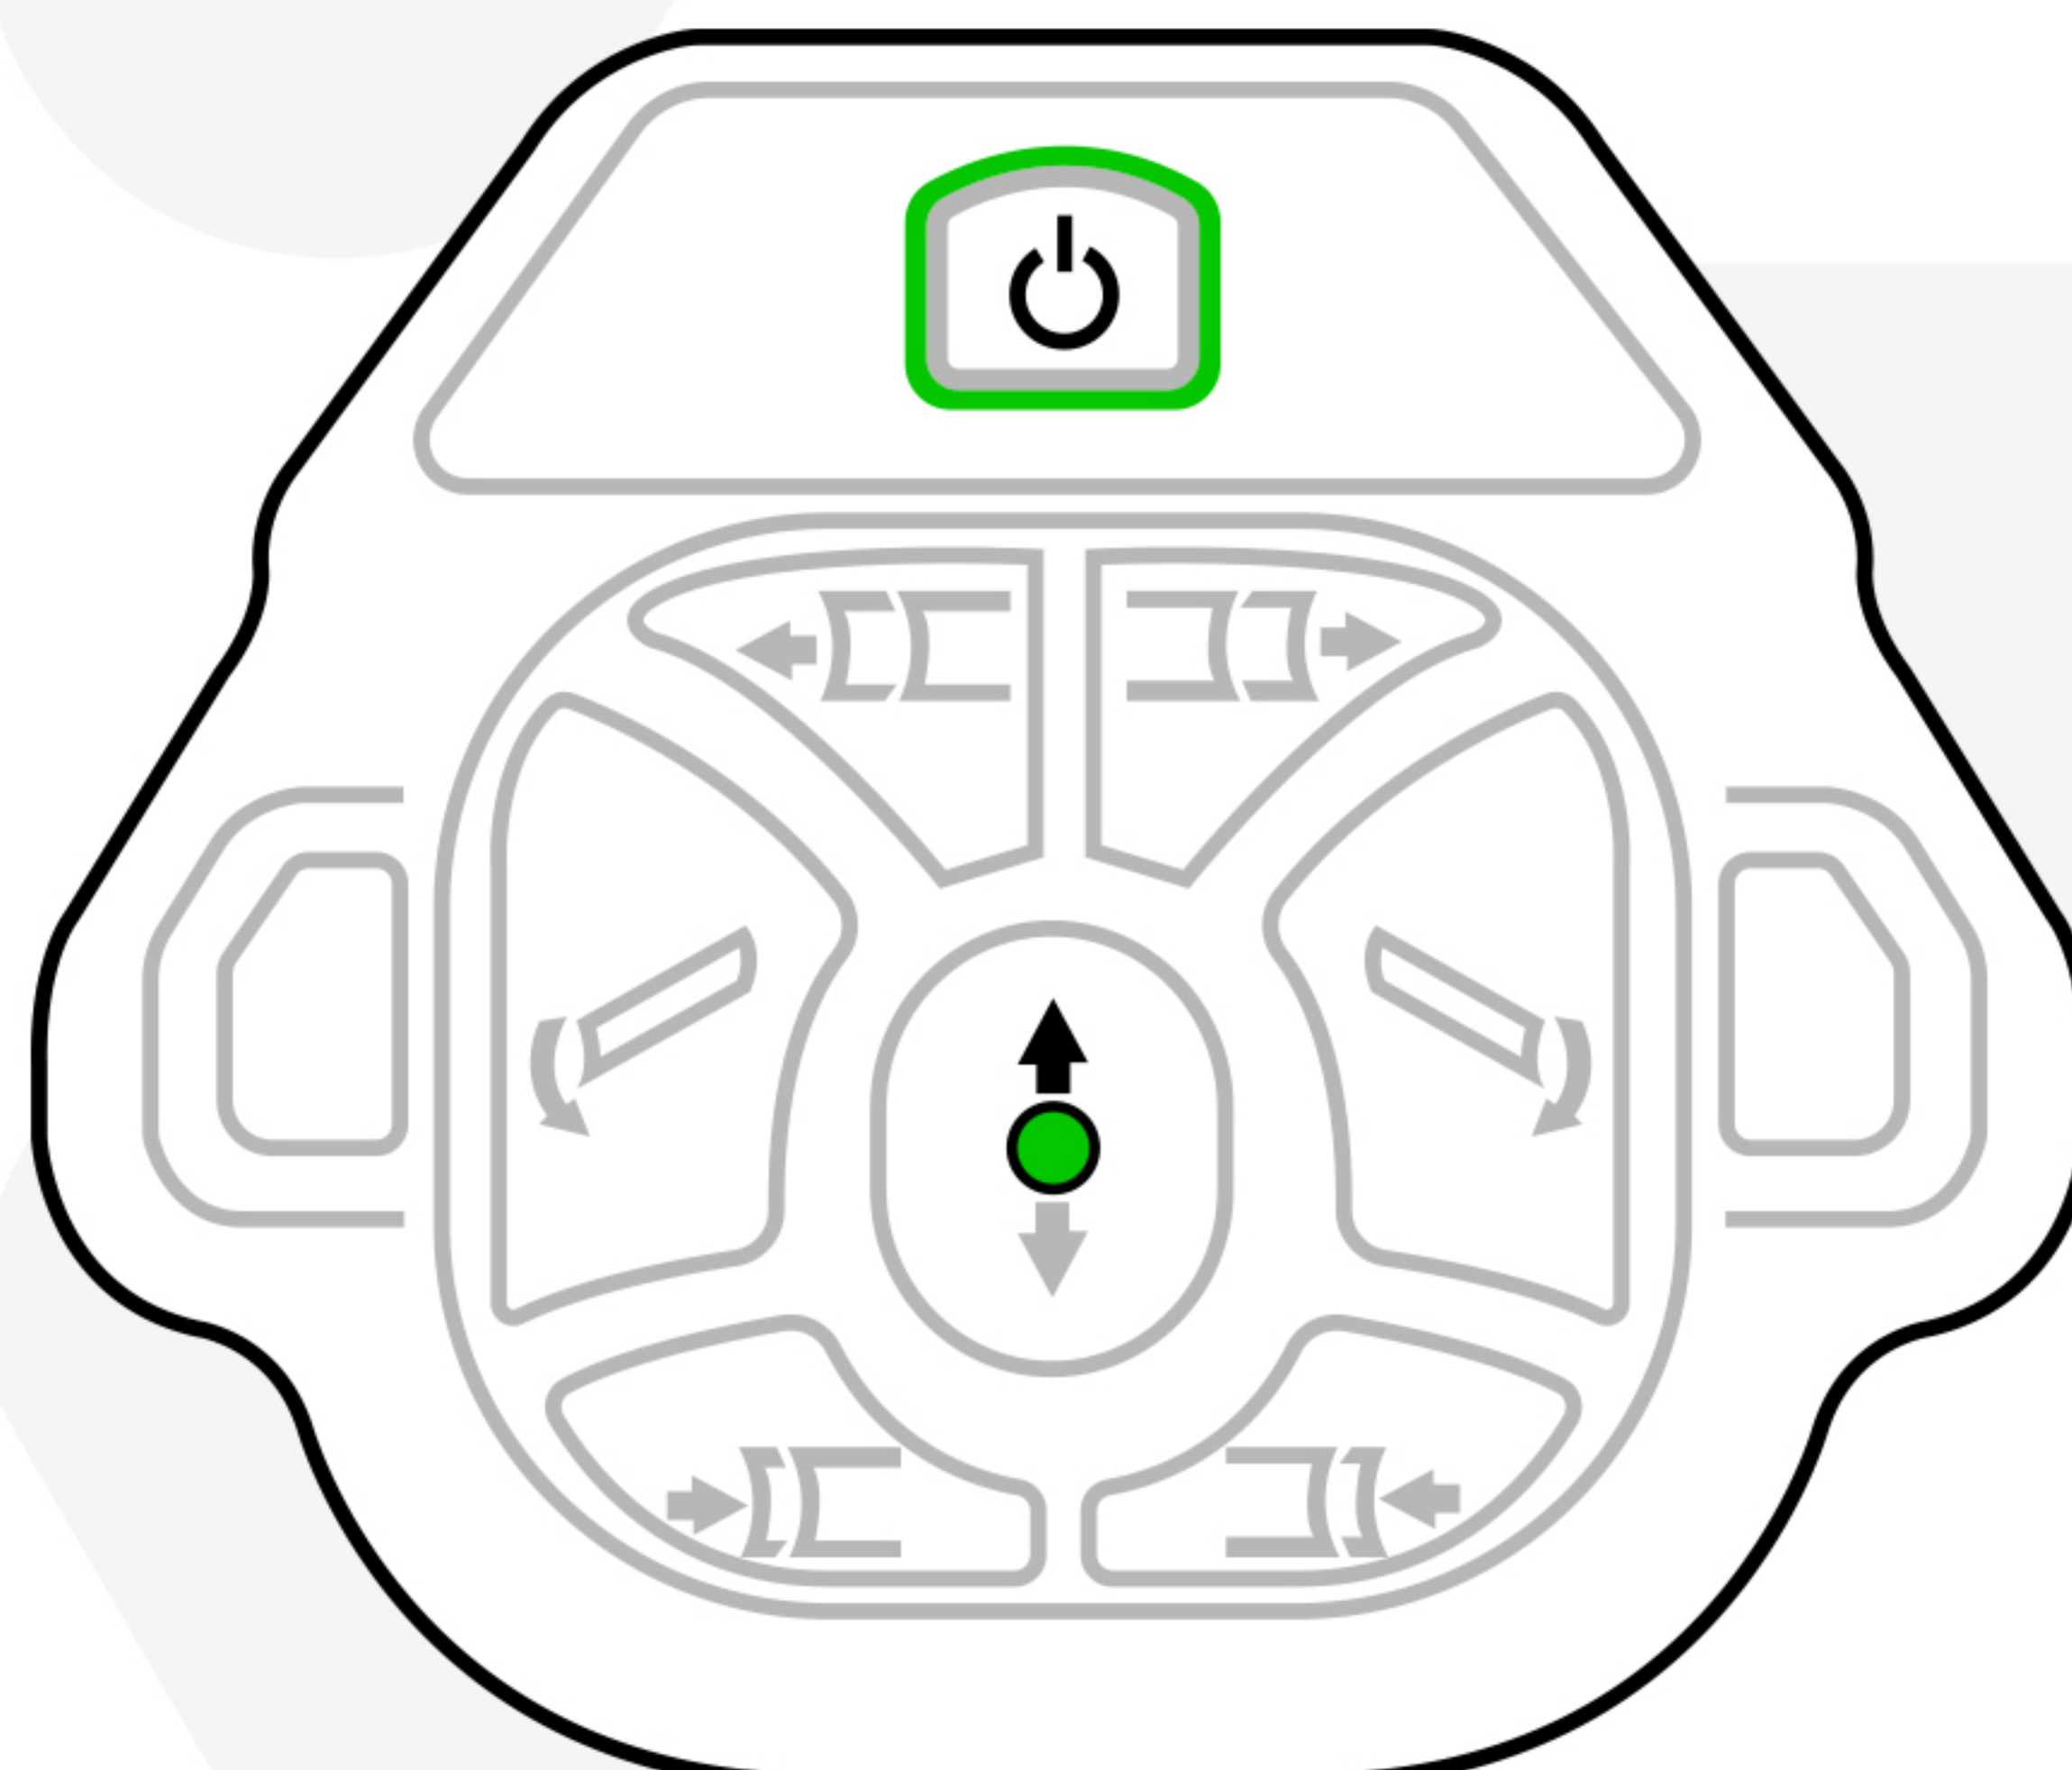


## Enabling/Disabling Express Raise:

- ⊗ While in the programming mode the center button will flash either Green or Red.

- Green: ● Express Raise Enabled
- Red: ● Express Raise Disabled

- ⊗ To Enable or Disable Express Raise, push the **UP** button to toggle to the setting that is preferred.


- ⊗ **Turn Controller power OFF to save configurations.**

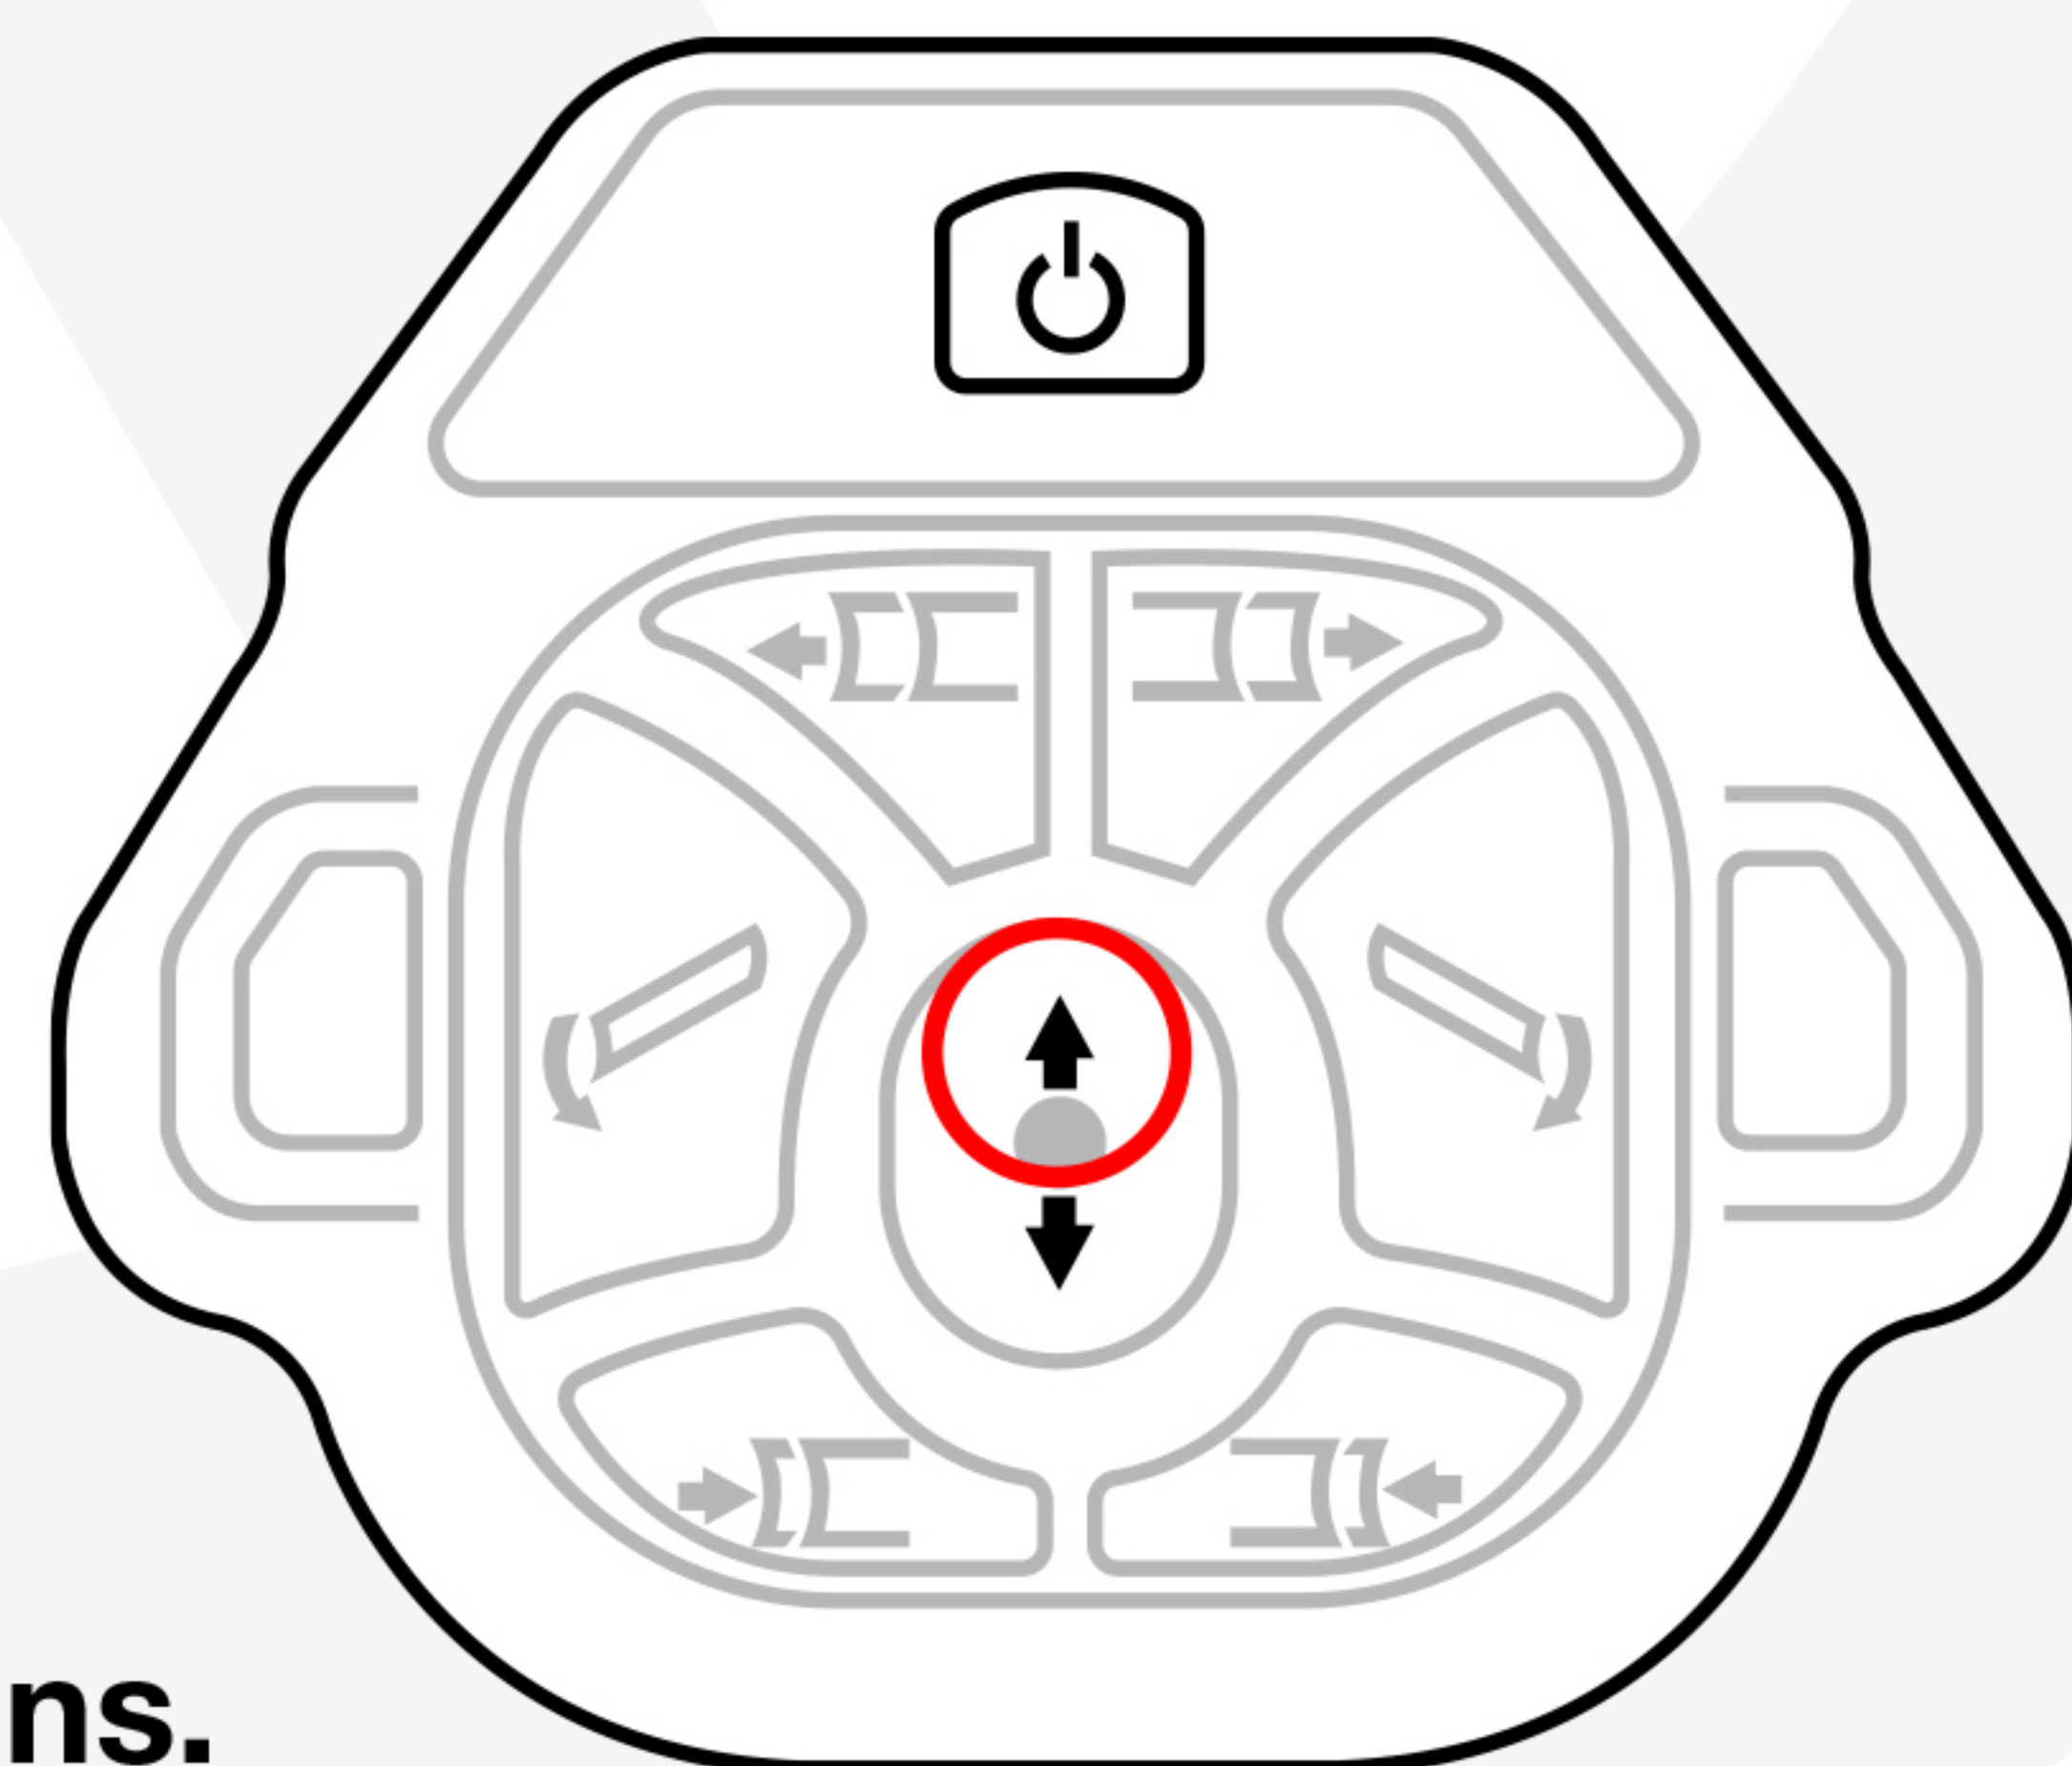


**NOTE: The settings will be saved until this procedure is repeated.**

## Setting Warning Light Pattern:

- ⊗ While in the programming mode, press the **DOWN** Button. The two AUX buttons will begin to flash in a pattern.

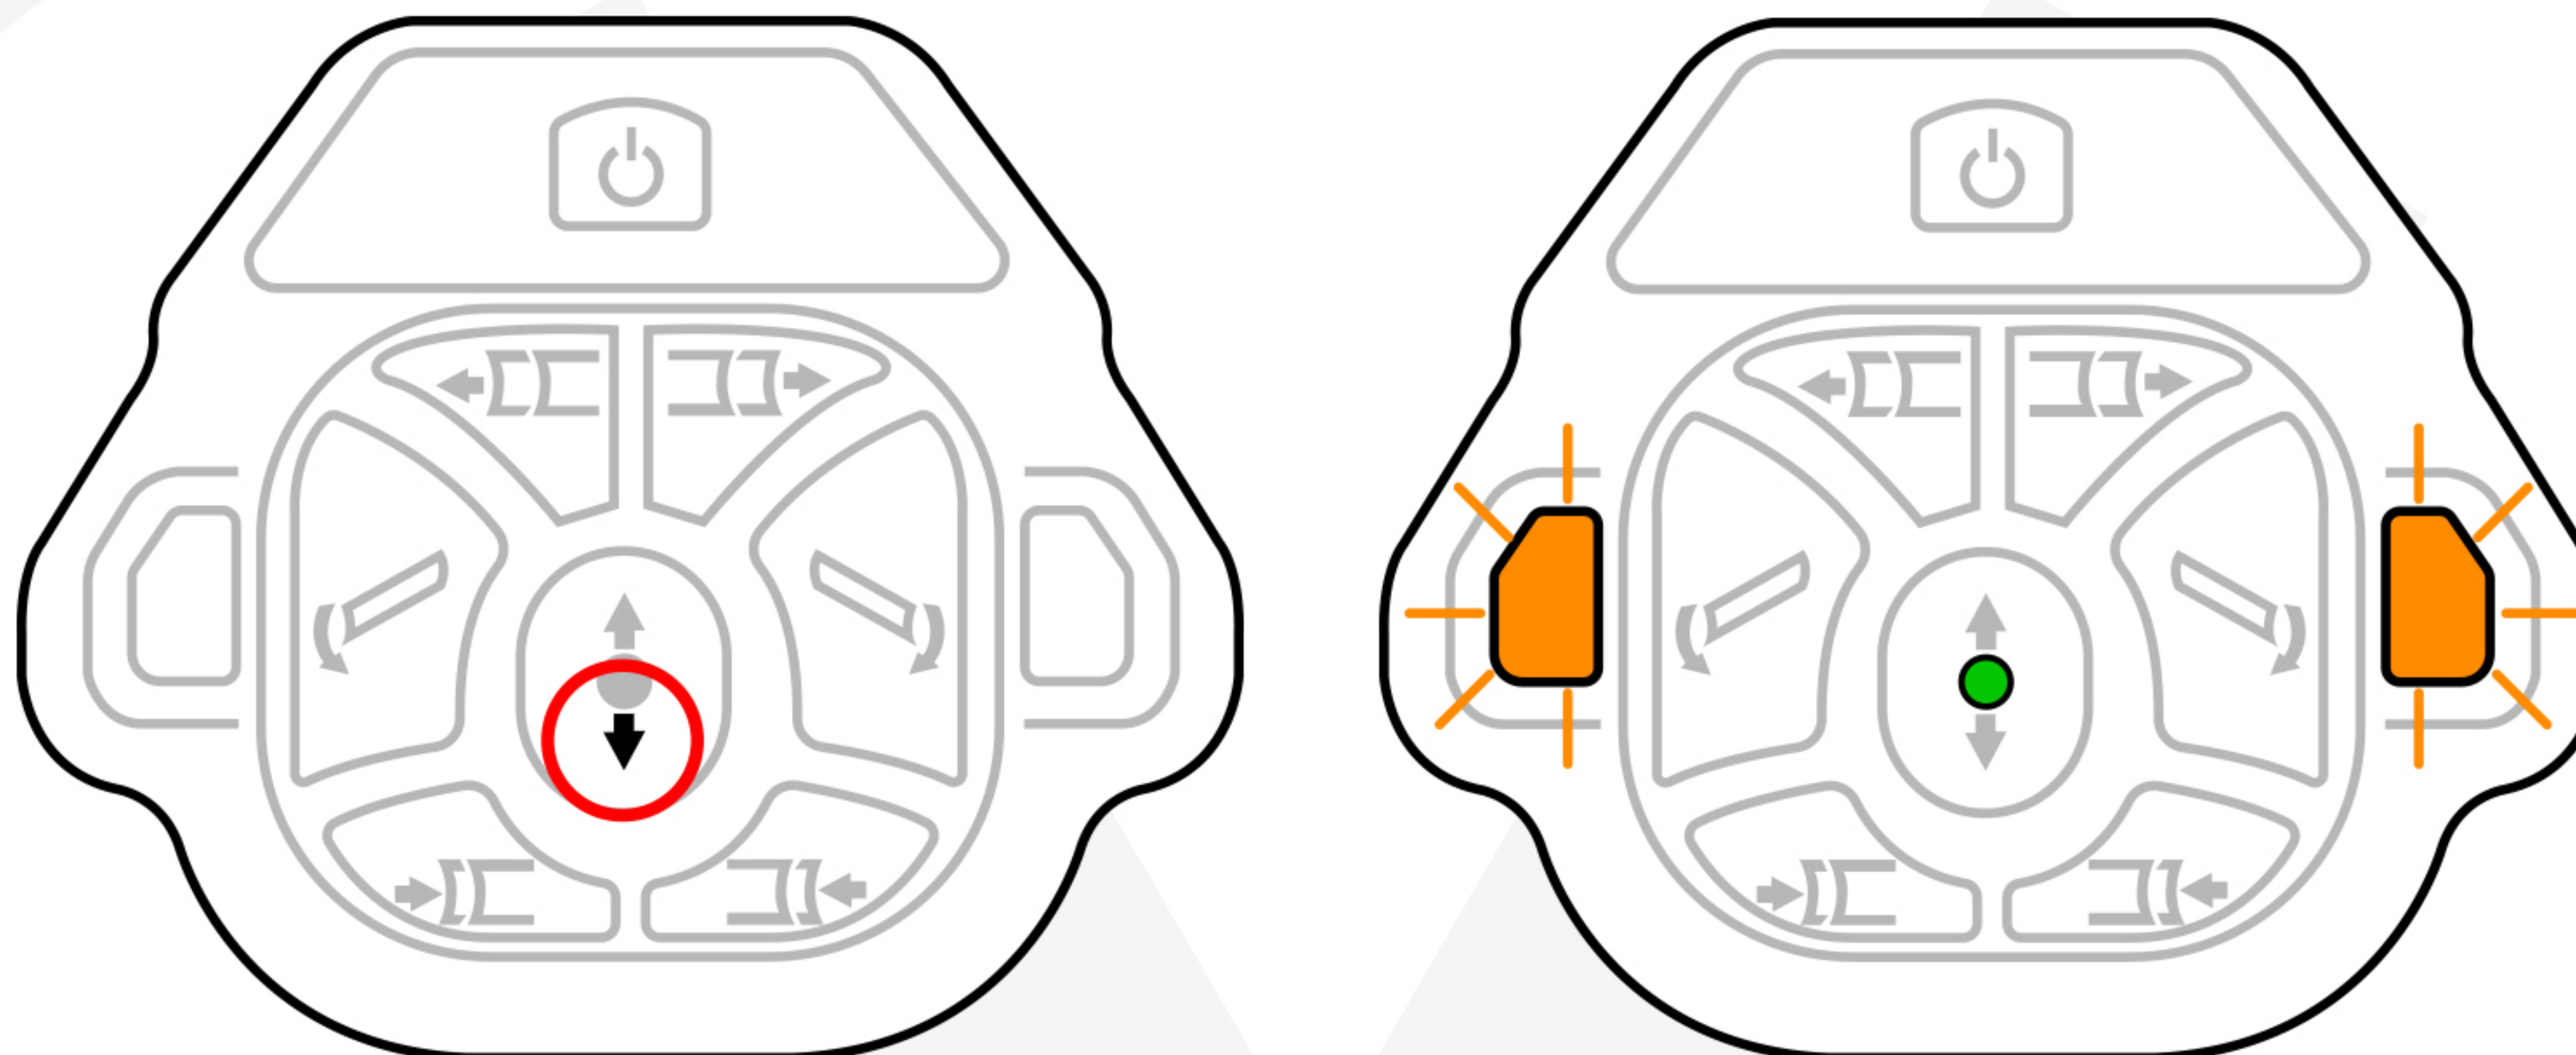

- ⊗ Press the **UP** button to cycle through the flash patterns. Stop on the desired pattern.

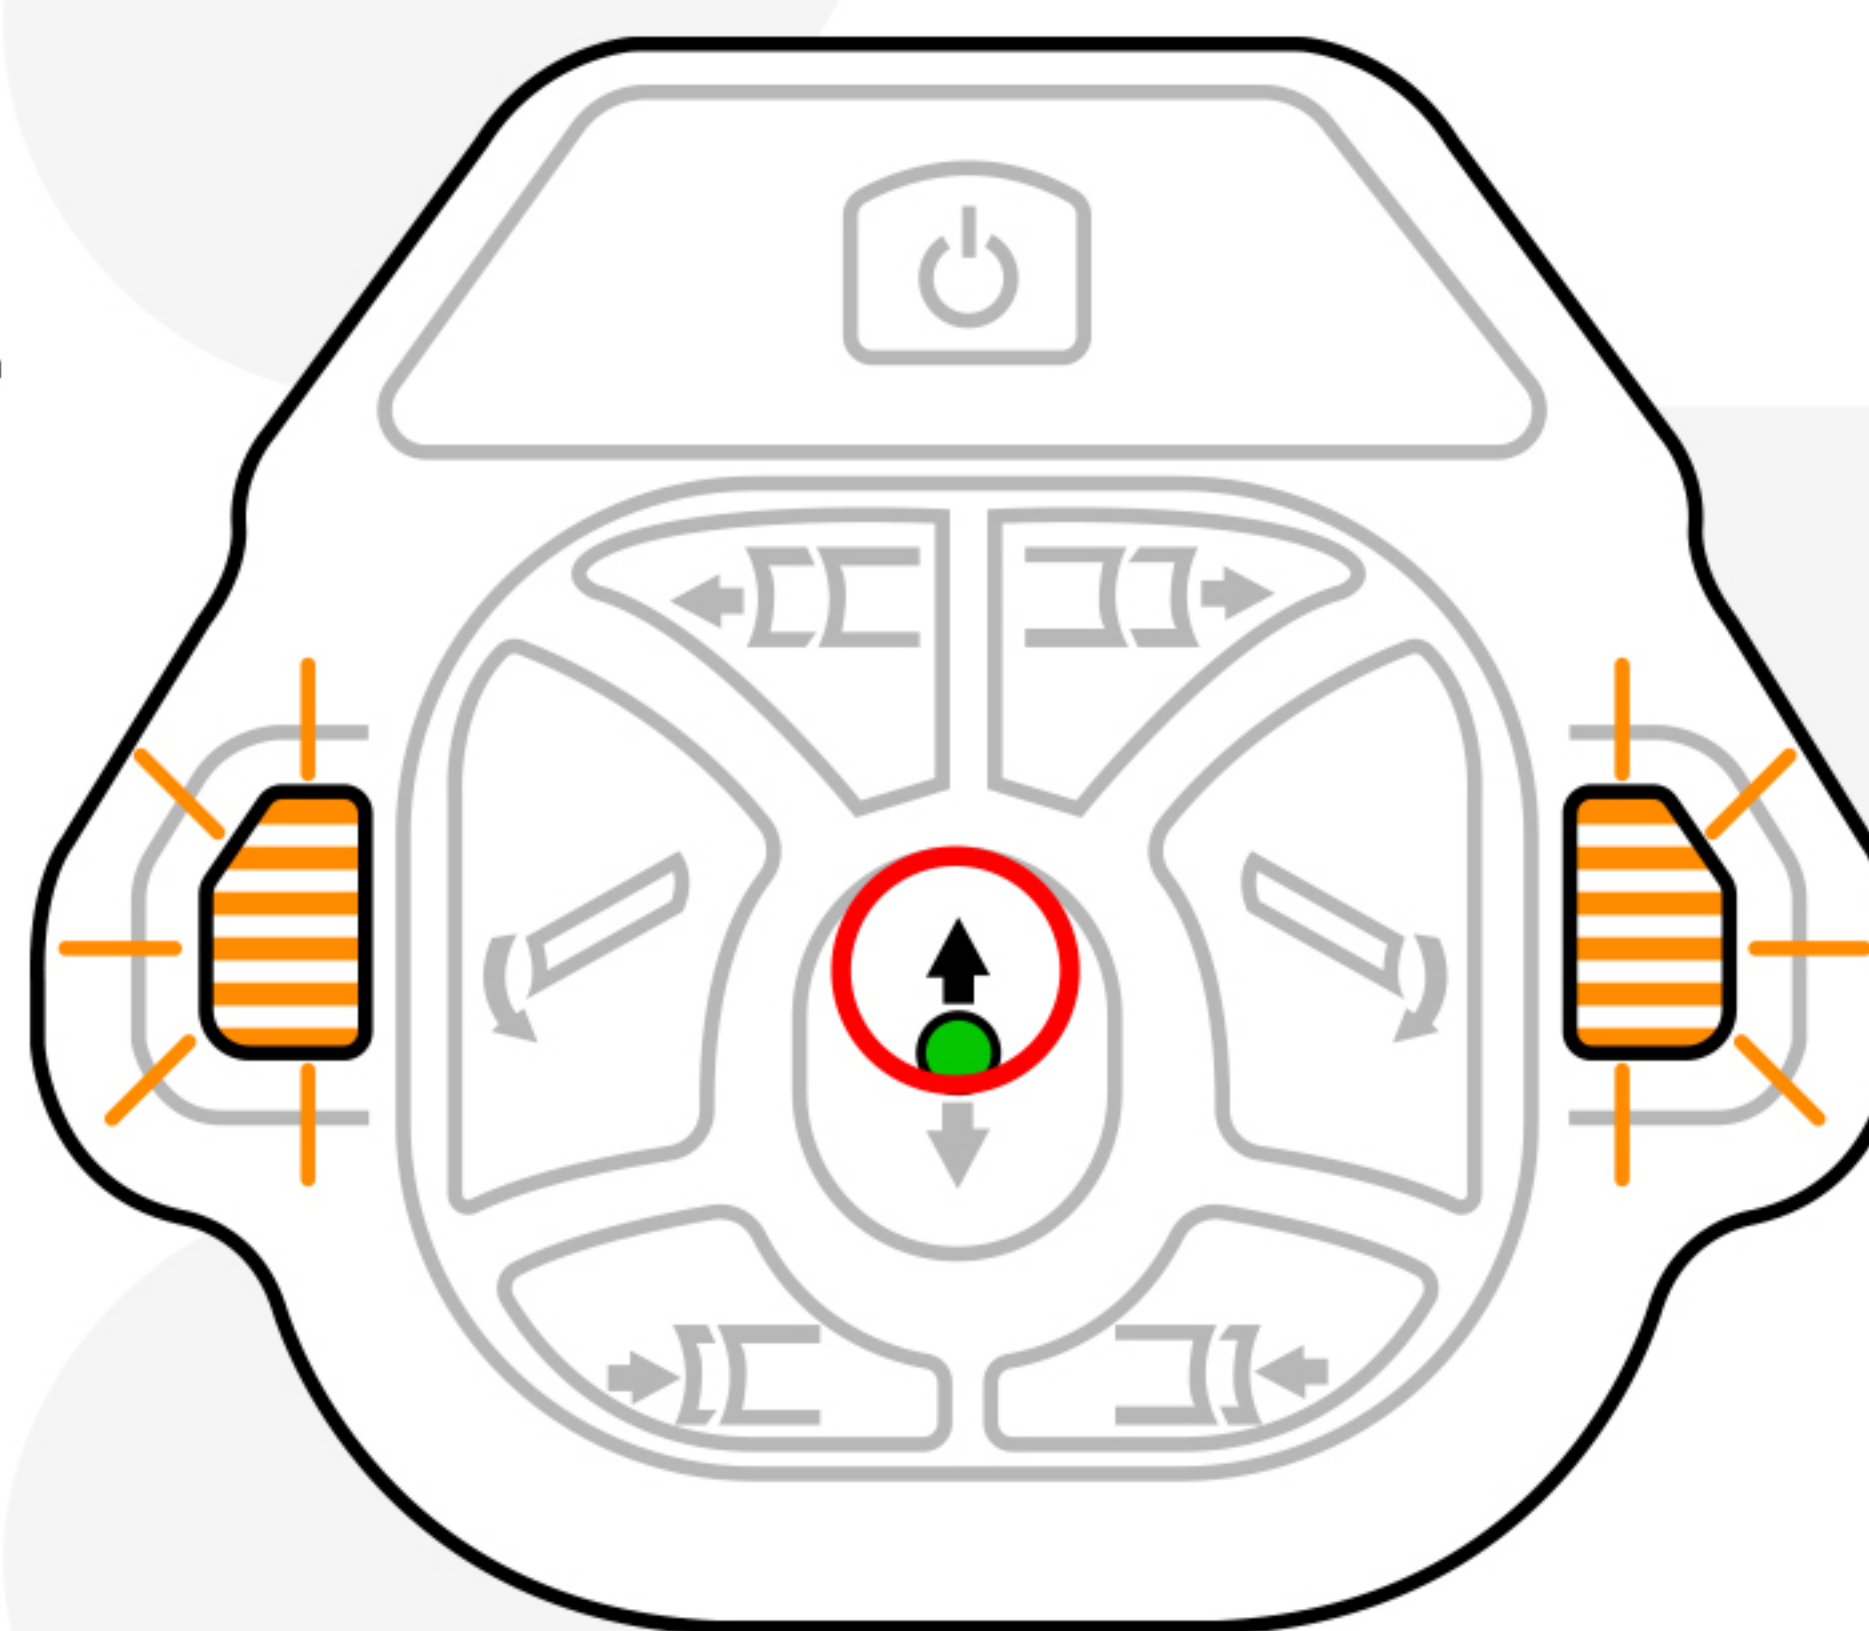


- ⊗ **Turn Controller power OFF to save configurations.**

## Setting AUX Button Configuration:

- ⊗ While in the programming mode, cycle through the configurations of the **AUX** buttons by pressing **AUX 1** or **AUX 2** to select the desired configuration. See the descriptions of the configurations below:

- Blue LED: High Beam Toggle
- Magenta LED: ClearBeam ON/OFF
- Orange LED: Warning Lights ON/OFF
- Red LED: Spreader ON
- No LED: No configurations are assigned

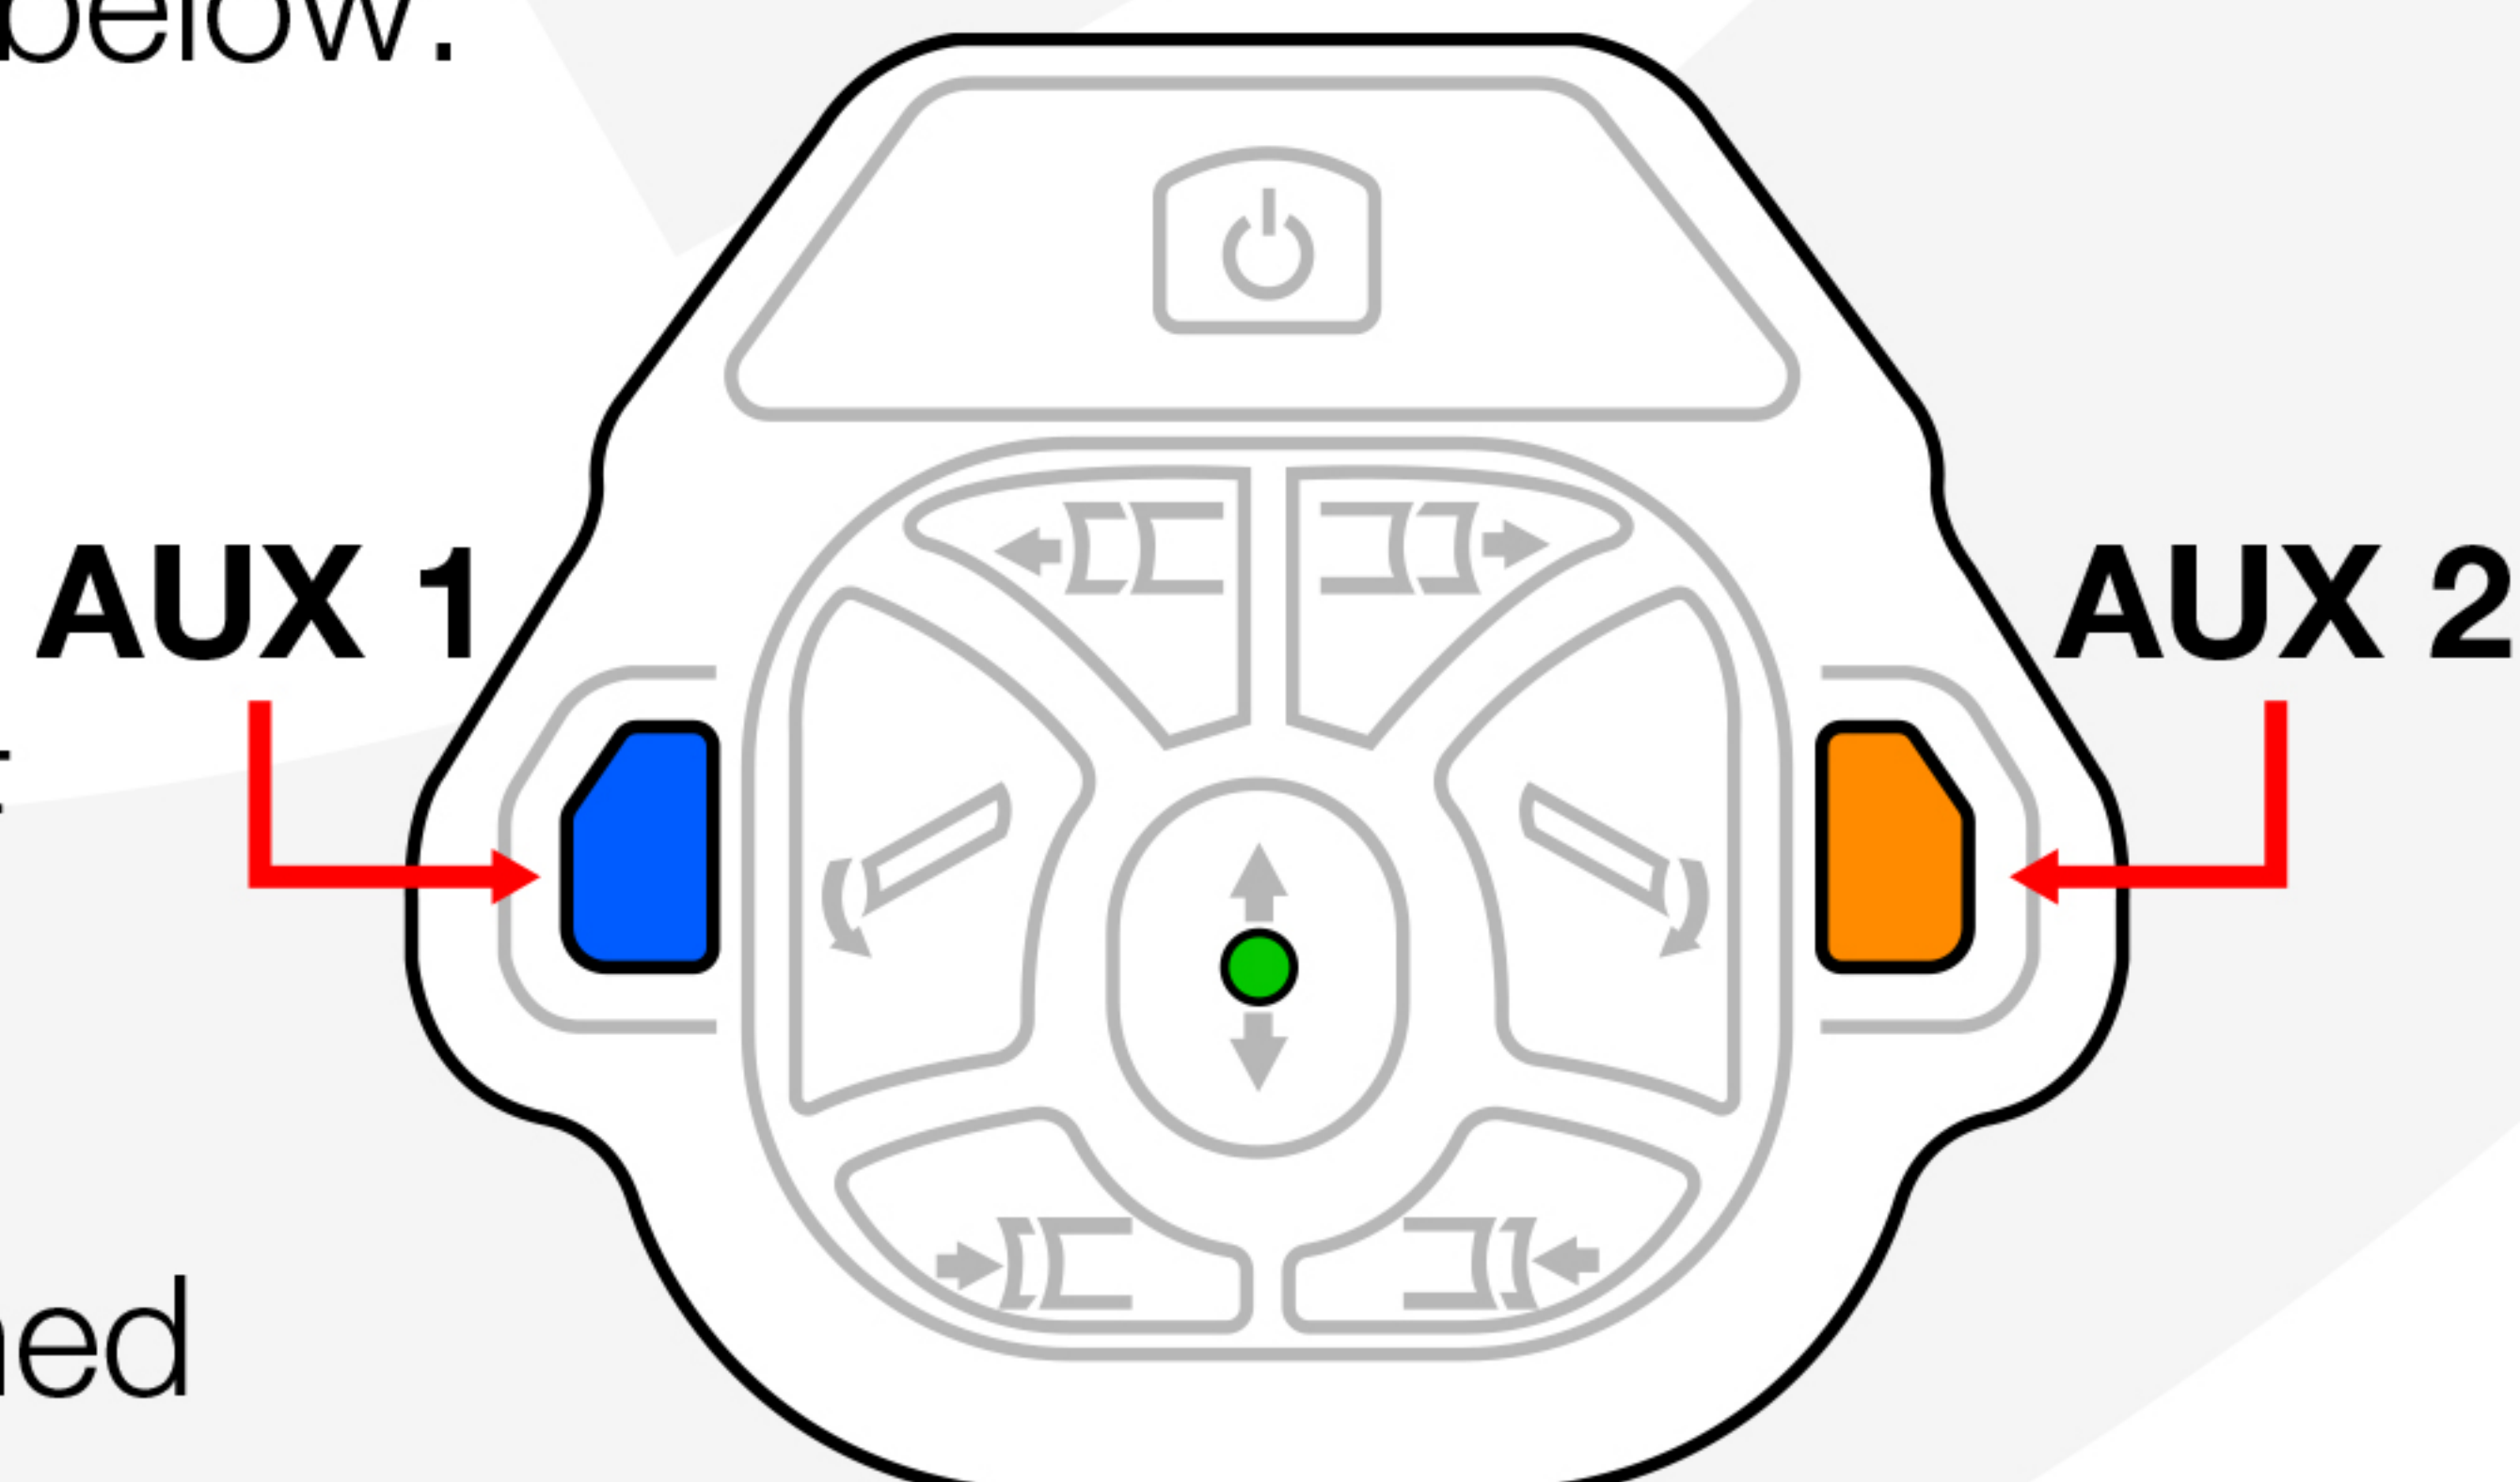

- ⊗ **Turn Controller power off to save configurations**